É Apple Watch Ultra

Apple Recycler Guide

April 2023

© 2023 Apple Inc. All rights reserved.

Contents

- 3 About This Guide
- 4 Identification
- 5 Directive 2012/19/EU Annex VII Components
- 6 Safety Considerations
- 9 Recommended Tools
- 10 Disassembly Instructions
- 23 Material Categorization of Output Fractions

About This Guide

Apple Recycler Guides provide guidance for electronics recyclers on how to disassemble products to maximize recovery of resources. The guides provide step-by-step disassembly instructions and information on the material composition to help recyclers direct fractions to the appropriate material recycler.

To conserve important resources, we work to reduce the materials we use and aim to one day source only recycled or renewable materials in our products. A key path to reaching that goal is resource recovery from end-of-life electronics.

Disassembly procedures are intended to be performed only by trained electronics recycling professionals. The recycler is responsible for independently evaluating and ensuring compliance with all applicable environmental, health, and safety laws related to the work. These include but are not limited to laws relating to the management, handling, shipping, and disposal of the outputs of this work as waste and laws in place to ensure the health and safety of all employees who support this work.

For questions or feedback about this guide, email contactesci@apple.com.


Identification

You can find the model number on the band slot of the Apple Watch Ultra.



Model numbers: A2622, A2684, A2859

If the band is attached, press and hold the band release button; then slide the band across to remove it.

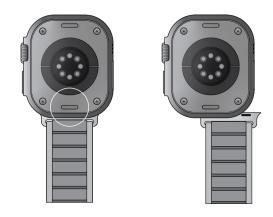

Directive 2012/19/EU Annex VII Components

Directive 2012/19/EU Annex VII requirements apply to the following substances and components.

Substance/Component	Apple Part Name	Removal Instructions
Printed circuit board if the surface is greater than 10 square centimeters	Display logic board, main logic board	Follow steps 1–17
External electric cables	Magnetic charging cable	Follow step 1
Battery	Lithium-ion polymer battery	Follow steps 1–4
Cover glass and organic light-emitting diode (OLED) display if the surface is greater than 100 square centimeters	OLED display	Follow steps 1–2
No further substances or components as listed in Annex VII		

Safety Considerations

The recycler is responsible for independently evaluating all activities undertaken by its employees to perform or support the work and ensuring compliance with all applicable health and safety laws related to the work. These include but are not limited to laws relating to the health and safety of all employees who perform or support this work. The recycler is also responsible for evaluating the workspace and ensuring that the area in which the work is to be undertaken is designed using ergonomic best practices and meets all ergonomic requirements to ensure the protection of its employees.

Personal Protective Equipment

Personal protective equipment should be worn during the entire recycling process.



Battery Safety

This product uses a lithium-ion polymer battery. Before beginning any disassembly work, ensure that a safe working procedure for handling lithium-ion batteries has been established, which could include discharging the batteries so that they can be more safely managed. The following considerations may also be included:

- Remove anything from your person that could conduct energy, such as jewelry and watches, to avoid electric shock to yourself or the logic board.
- To avoid the potential for thermal runaway and the release of potentially noxious fumes, don't puncture, strike, or crush lithium-ion polymer batteries or devices powered by them.
- Don't throw, drop, or bend the battery.
- Don't expose the battery to excessive heat or sunlight.
- Don't use tools that are sharp or conduct electricity.
- Keep your workspace clear of foreign objects and sharp materials.
- Dispose of batteries according to local environmental laws and guidelines.

Workspace safety guidelines

- Use heat-resistant gloves and safety glasses.
- Keep a sand dispenser within arm's reach (2 feet or 0.6 m) on one side of the workstation, not above the workstation. The dispenser should be a wide-mouthed, quick-pour metal container with a flip-top lid or tray that contains 8–10 cups (1.9–2.4 L) of clean, dry, untreated sand.
- Keep the battery at least 2 feet (0.6 m) from paper and other combustible materials.
- Work in an area with adequate ventilation.

Handling a thermal runaway

If you notice any of the following signs, a thermal runaway is likely underway, and you should act immediately:

- The lithium-ion polymer battery or a device containing one begins to smoke or emit sparks or soot.
- The battery pouch suddenly and quickly puffs out.
- You hear hissing or popping sounds.

Don't use water or an ABC/CO₂ fire extinguisher on a thermal runaway battery or a device containing one. Water and ABC/CO₂ fire extinguishers will not stop the reaction.

Do smother the battery or device immediately with plenty of clean, dry sand, dumped all at once. Timing is critical; the faster you pour all the sand, the faster the thermal runaway will stop.

Do leave the room for 30 minutes if the thermal runaway causes any irritation.

Do wait 30 minutes before touching the battery. Wear heat-resistant gloves and safety glasses to remove the battery from the sand, or use a touchless thermometer to measure the battery temperature. Only touch the battery when the event has finished.

Do dispose of the damaged battery or device (including any debris removed from the sand) according to local environmental laws and guidelines.

OLED Safety

Broken OLEDs must be handled properly to ensure the safety of your employees and mitigate any hazards. Package broken OLEDs in an appropriate container to properly manage the hazards associated with the materials and store only with compatible materials. All waste must be properly classified, packaged, and labeled in accordance with all relevant laws and regulations.

7

Hazard Warnings






Rechargeable battery hazard


8


Recommended Tools

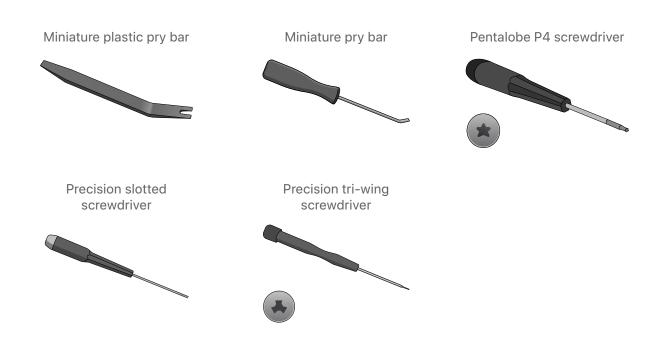

Disassembly Instructions

- **1.** Remove the magnetic charging cable.
 - >> Ensure that the Apple Watch is turned off.
 - >> Disconnect the magnetic charging cable.



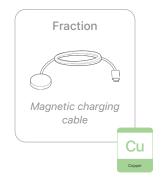


2. Remove the OLED display.




Tools Used


- >> Hold the Apple Watch Ultra at the edge of a counter with the display facing up.
- Insert the tool tip between the display and the enclosure. Push the handle down to pry the display off the enclosure.

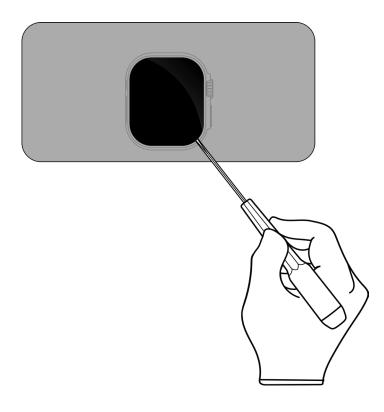


>> Remove the display by hand. Set the enclosure aside.

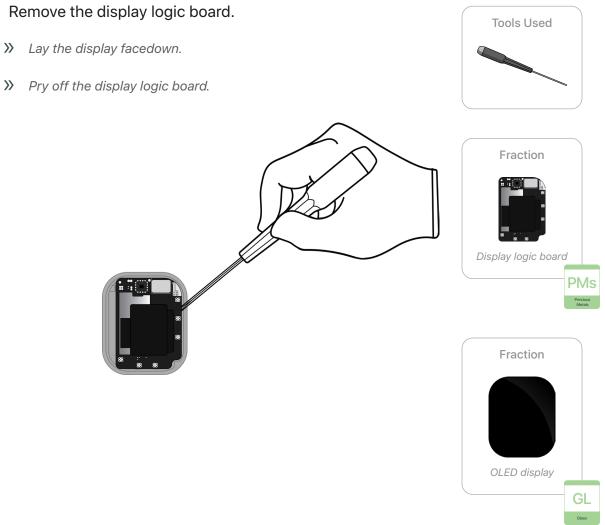

3. Remove the display logic board.

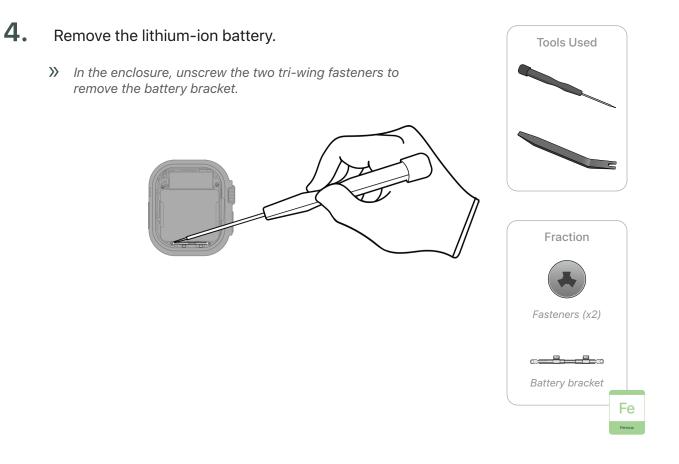

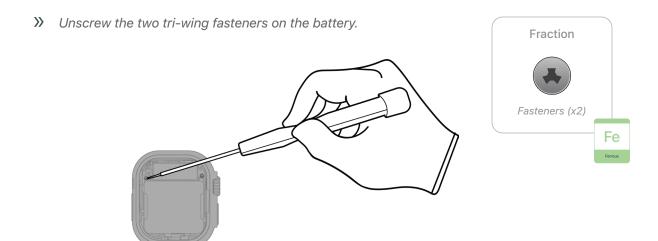


>> Carefully remove the lithium-ion polymer battery using the miniature plastic pry bar.






5. Remove the Taptic Engine.

>> Unscrew the two tri-wing fasteners.

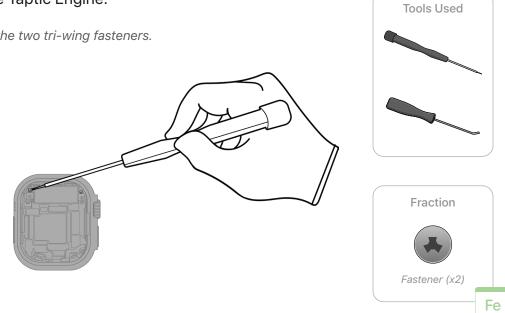


>> Pry off the Taptic Engine.

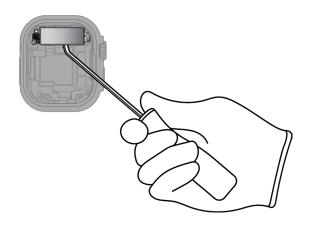




6. Remove the push connector.


>> Unscrew the two tri-wing fasteners.

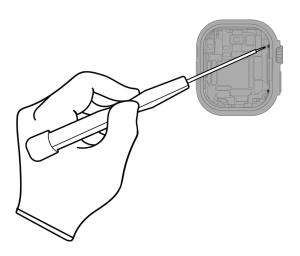




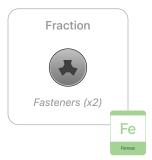


>> Pry off the push connector.

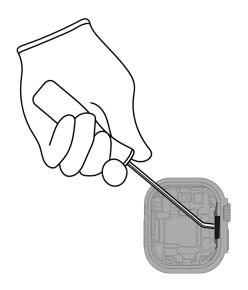


7. Pry off the digital crown flex segment.

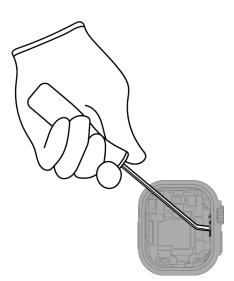


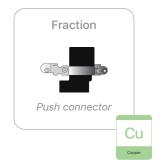



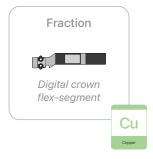


8. Remove the microphone bracket by unscrewing the two tri-wing fasteners.

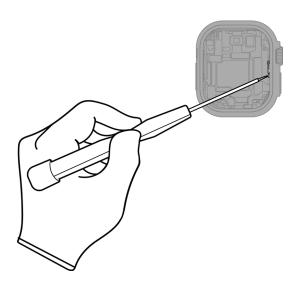







9. Pry off the microphone.

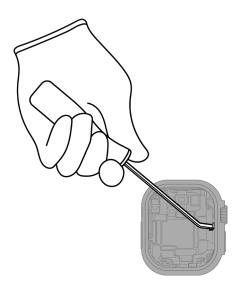




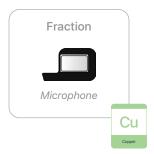

10. Remove the microphone array bracket by unscrewing the two tri-wing fasteners.

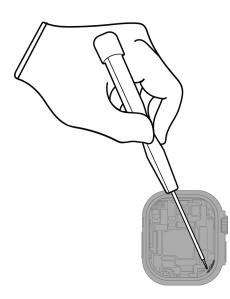


11. Pry off the microphone array.

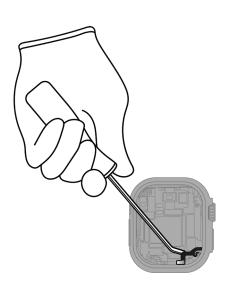







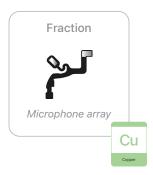

12. Pry off the speaker.

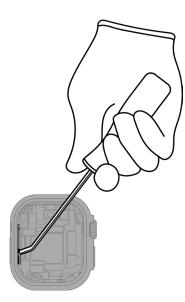




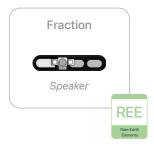


13. Remove the other microphone array.


>> Unscrew the two tri-wing fasteners.

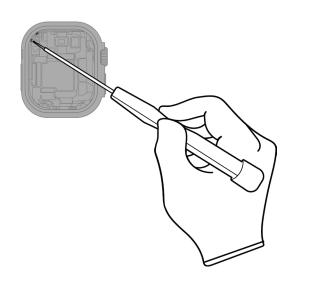




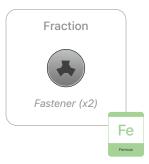


>> Pry off the microphone array.

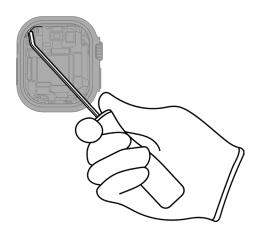


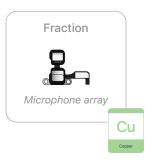

14. Pry off the depth sensor.

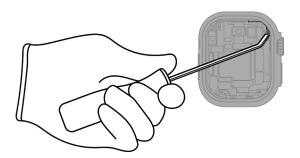




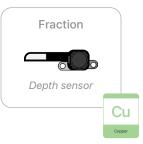


15. Remove the sensor array.

- \gg Turn over the enclosure.
- >> Unscrew the four fasteners with the pentalobe P4 screwdriver.



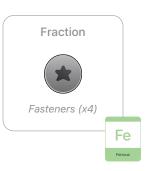


>> Pry off the sensor array with the precision slotted screwdriver.

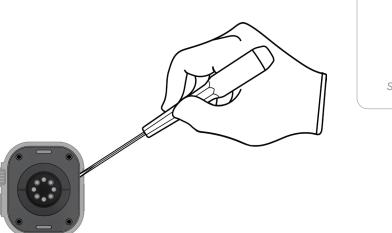





16. Remove the main logic board brackets by unscrewing the three tri-wing fasteners.

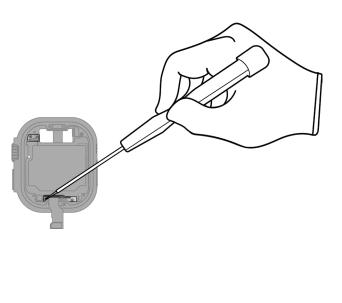



17. Remove the main logic board.

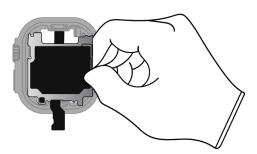


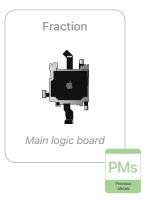




Material Categorization of Output Fractions

All outputs from this process must be managed, handled, and disposed of in accordance with applicable waste laws and regulations, including but not limited to the Waste Framework Directive and its national enactments in Europe.

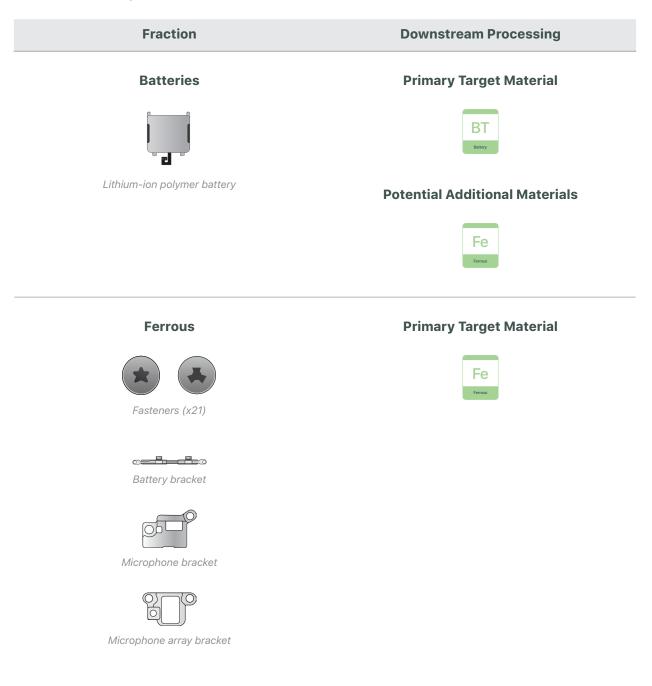

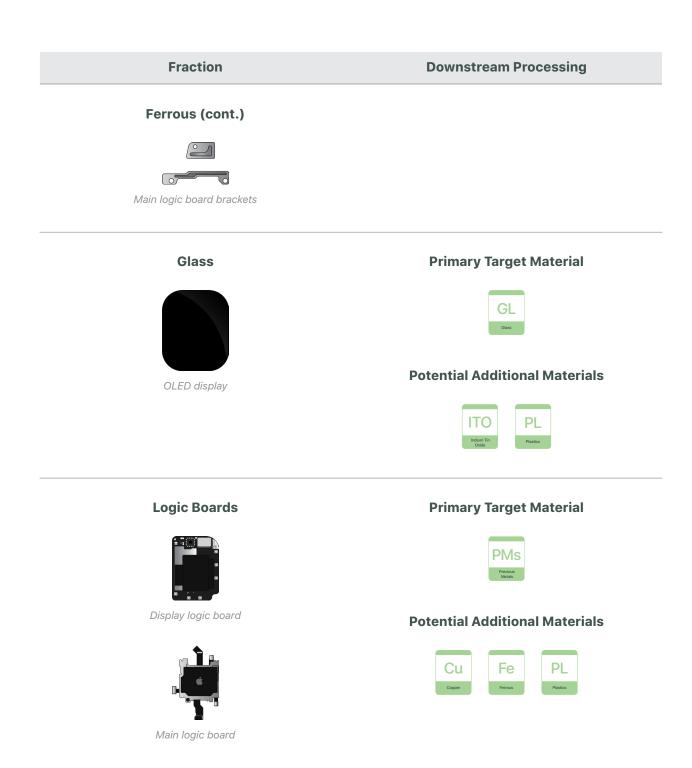

Fraction

Mixed Electronics



Magnetic charging cable



Push connector



Digital crown flex segment



Microphone



Microphone arrays



Depth sensor



Sensor array


Downstream Processing

Primary Target Material



Potential Additional Materials



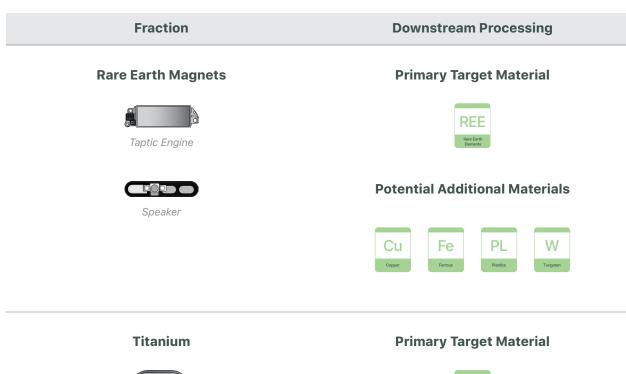



Enclosure



Potential Additional Materials

